

T6102


“thera-RTL”




**Montage- und Bedienungsanleitung /
Installation and operating instructions / Mode d'emploi**

“thera-RTL” für Standard Honeywell Thermostatventilen Typ UBG, BB und KV /
“thera-RTL” for standard Honeywell UBG, BB and KV type thermostatic valves /
“thera-RTL” pour standard Honeywell robinet thermostatique typ UBG, BB, et KV

! Montage im Rücklauf / Installation in return pass / Montage aux canalisation de retour

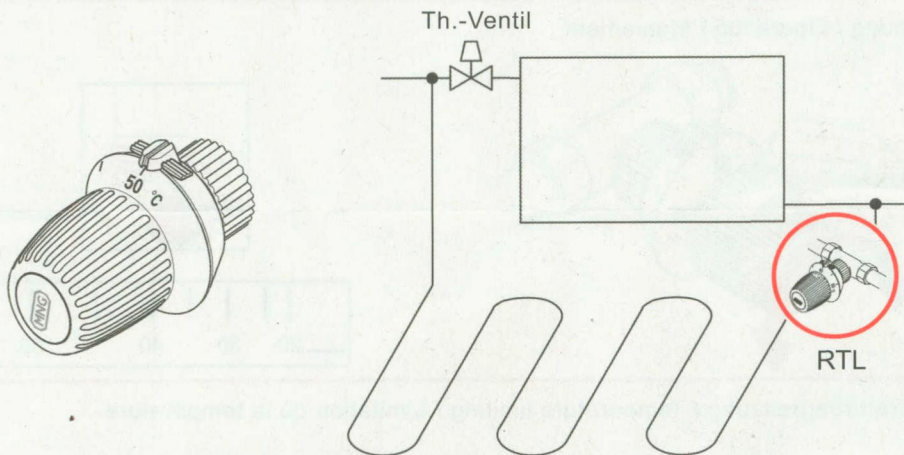

Montage / Installation / Montage

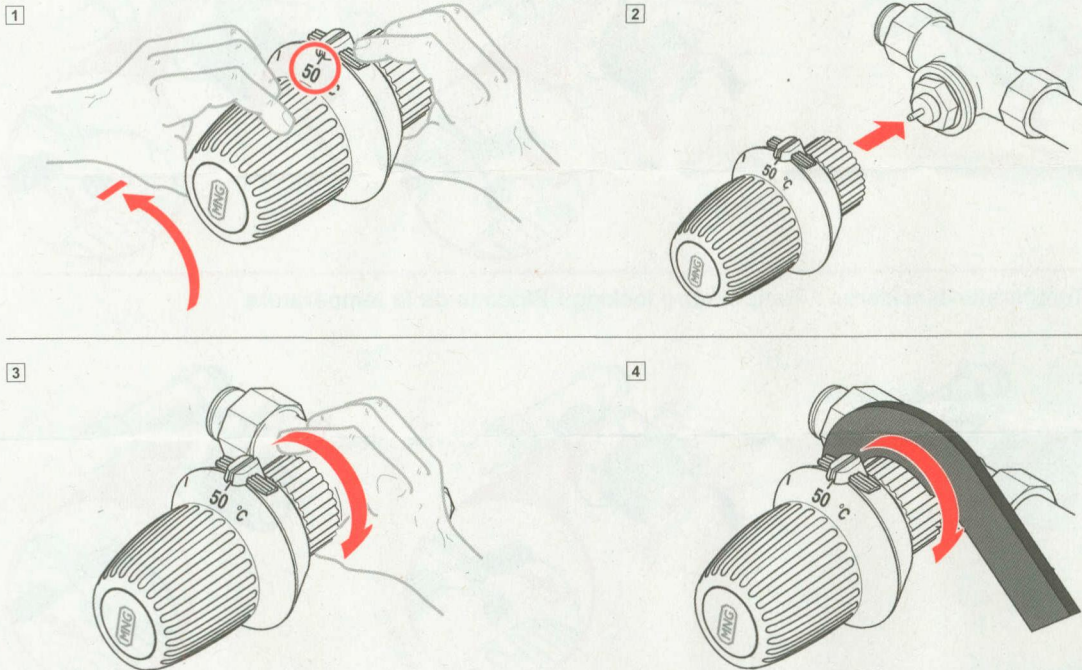

Environmental and Combustion Control

Honeywell GmbH
Hardhofweg
74821 Mosbach, Germany
Phone: +49 (6261) 810
Fax: +49 (6261) 81393

Manufactured for and on behalf of the
Environmental and Combustion Controls
Division of Honeywell Technologies Sàrl,
Rolle, Z.A. La Pièce 16, Switzerland by its
Authorised Representative Honeywell GmbH

MU2H046GE25 R0410
04.100.22.003 Rev. C






T6102 "thera-RTL"

Montage- und Bedienungsanleitung /
Installation and operating instructions / Mode d'emploi






Bedienhinweise / Operating instructions / Mise en service

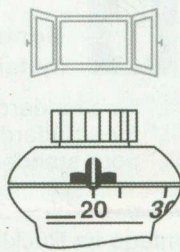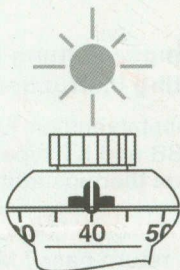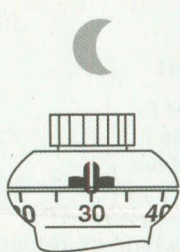

Bedienung / Operation / Maniement

 
1

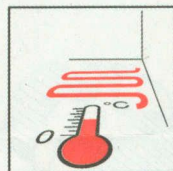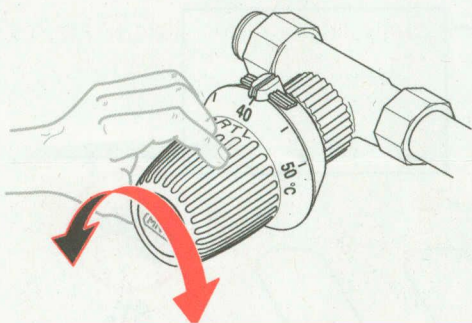


Temperaturbegrenzung / Temperature limiting / Limitation de la température

30° - 40°

1

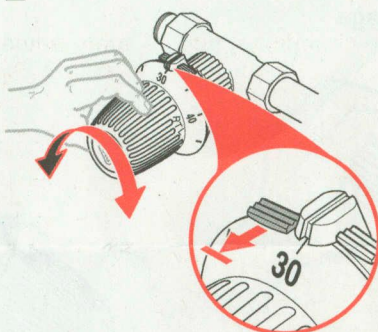


2

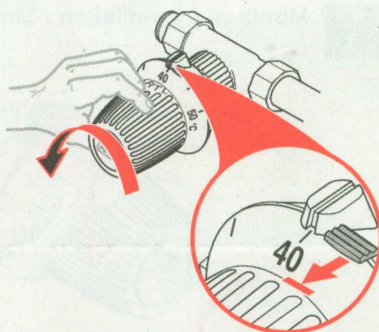


Temperatur blockieren / Temperature locking / Blocage de la température

40°

1

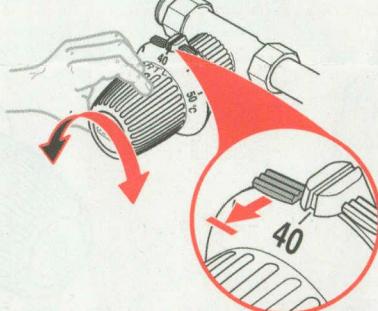

2

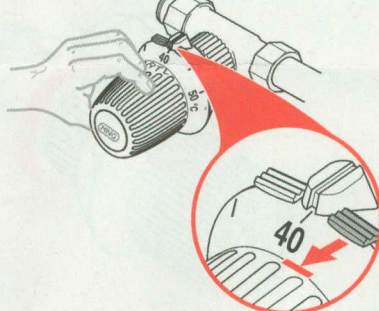

Honeywell

Environmental and Combustion Control

Honeywell GmbH
Hardhofweg
74821 Mosbach, Germany
Phone: +49 (6261) 810
Fax: +49 (6261) 81393

Manufactured for and on behalf of the
Environmental and Combustion Controls
Division of Honeywell Technologies Sàrl,
Rolle, Z.A. La Pièce 16, Switzerland by its
Authorised Representative Honeywell GmbH

MU2H046GE25 R0410
04.100.22.003 Rev. C